



Actron Update Instructions

1. Double click the **Actron Launchpad** icon on your desktop to open Scanning Suite. If you do not have the icon on your desktop, you can find it by going to **Start Menu/All Programs/Scanning Suite/Actron**.




Or




2. Click **Tool Update**




3. The ScanLoader Wizard will open. Click **Next** to continue.

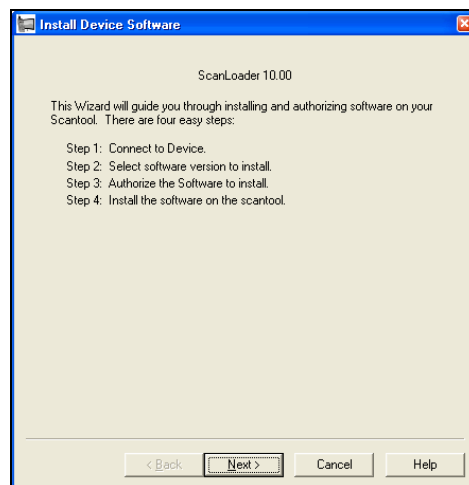


4. Connect your tool to the PC using the USB cable, power the tool on and put the tool in **Program Mode**. Then, choose to connect to the tool **Automatically** (recommended) and click **Next**. You can also choose to **Manually** select the USB port and click **Next**.

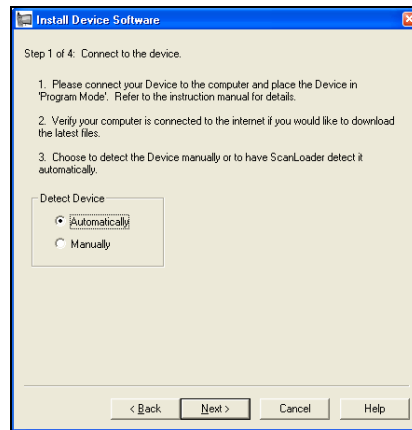

5. Wait while Scanning Suite checks for the newest tool software version.

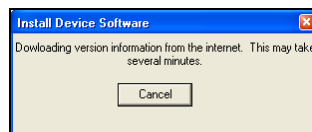


6. Choose which software version you would like to install and click **Next**.

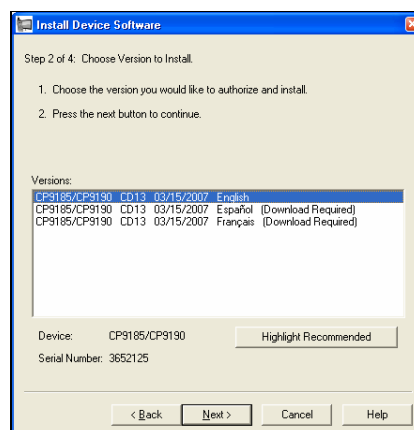


NOTE: If the version list is blank or "Download Required" is not present, your tool may have already been updated with the most current software version. In this case, an update is not necessary.

7. Wait while Scanning Suite downloads the version information.

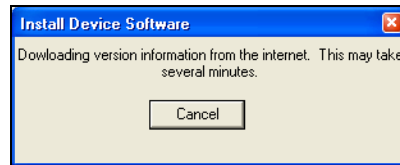


8. If you are installing a free software update, the software serial number and authorization code is not required. Simply click **Next** to continue.


If you have purchased an update, click the **Open Scanning Suite Update URL** button to obtain your authorization code.

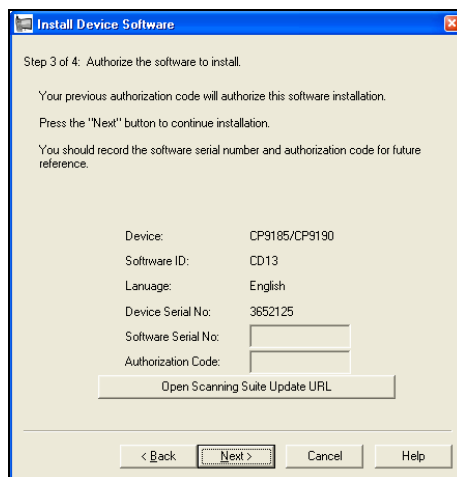


9. Click **Finish** to install the software on your tool.

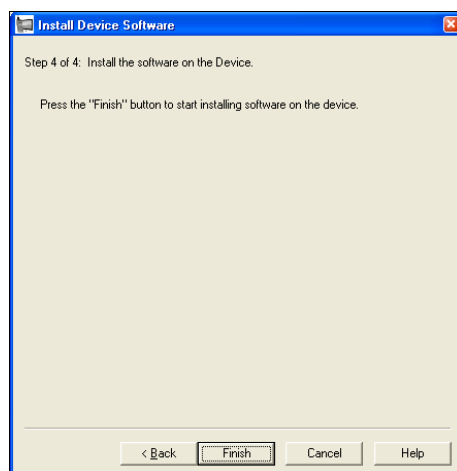

10. Wait while the tool is programmed.

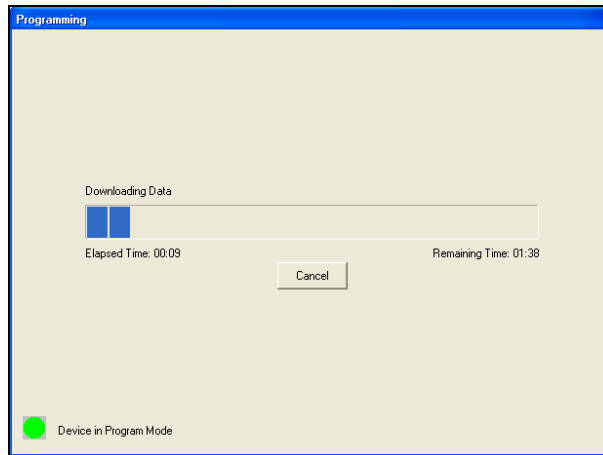

11. When the programming is complete, click **Done**.

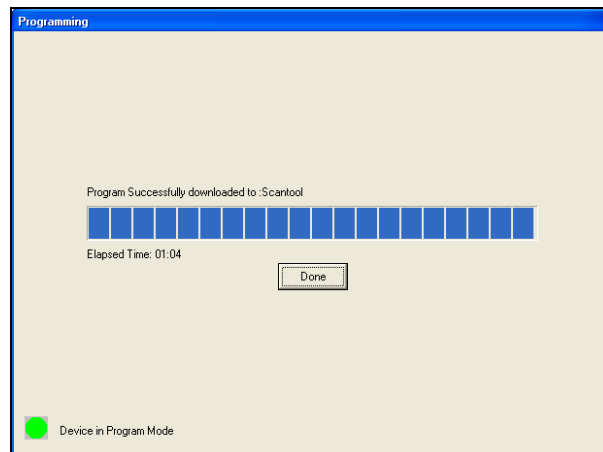

12. Shut down tool and disconnect it from your PC.

