


Actron Scanning Suite 4.0 Installation Instructions


1. Go to www.actron.com/downloads/, select your product, and click the **Download Scanning Suite 4.0** link.
2. **Save** the Actron_ScanningSuite_Ver4_Install.exe file to your PC. We recommend saving the file to your **Desktop**. It can be deleted after the installation process is complete.

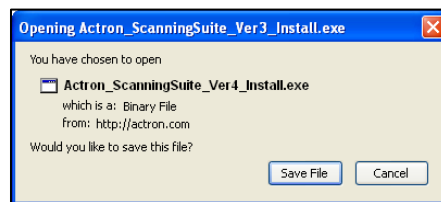


3. Once the download has completed, double click the **Actron_ScanningSuite_Ver4_Install.exe** icon.



4. Select the language you would like to install and click **OK**.

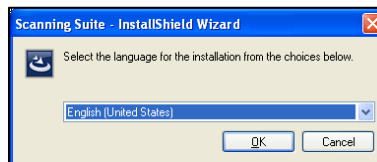


5. Wait for the installation to begin.

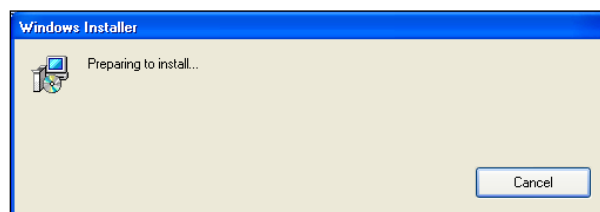

6. Click **Next**.




7. If you accept the terms in the license agreement, click the respective bubble and click **Next**.

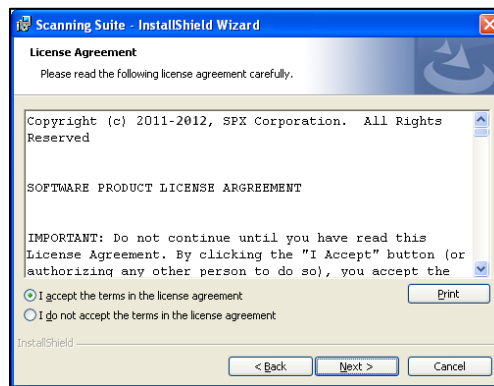


8. The Scanning Suite will install the files in a default location. Click **Next** to continue.


If you prefer to install the files in another location, click **Browse** to choose another destination folder and click **Next**.

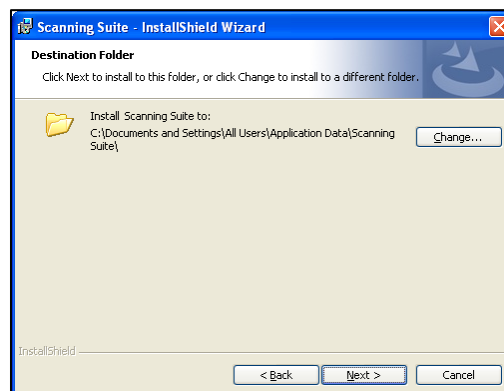

9. Click **Install**.

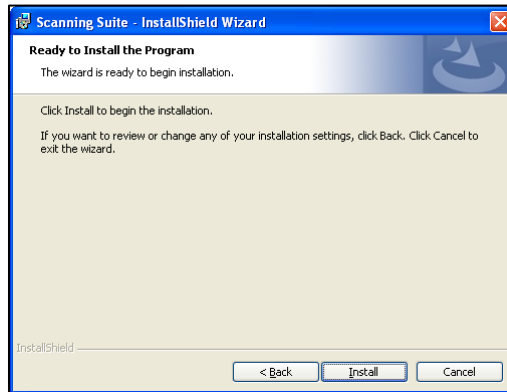

10. Please wait while Scanning Suite is installed.

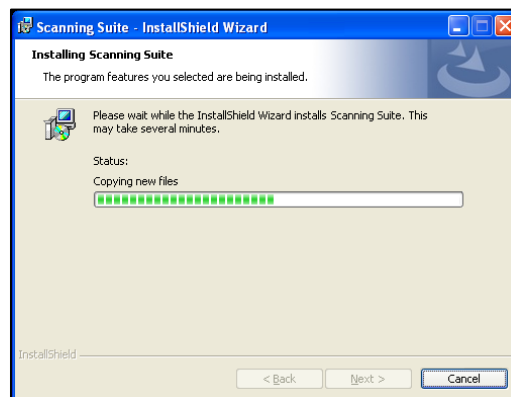

11. Click **Finish**. The installation is complete.

